

LightPen-Dual

Toolbar

Interactive Projector Software



MOUSE MODE: Use pen as computer mouse



PEN MODE: Use pen as a **red** pen



PEN MODE: Use pen as a **green** pen



PEN MODE: Use pen as a **blue** pen



PEN MODE: Use pen as a yellow highlighter



SHAPE MODE: Use pen to draw shapes—circle, square, right-triangle, triangle, line



COLOR & SIZE MODE: Change pen color and width



LINE ERASER MODE: Use pen to erase pen marks



BOARD ERASER MODE: Erase all marks on the board



SAVE MODE: Save current screen, including pen marks, as a picture



DUAL PEN MODE: Divides board in half so two people can work at one time



WHITEBOARD MODE: Turns entire board into a whiteboard



WHITEBOARD MODE ON: Tap once, whiteboard on, tap again to turn off whiteboard



PAGE UP: Tap to move up a page



INSERT PICTURE/BACKGROUND: Places picture as the background of the whiteboard



PAGE DOWN: Tap to move down a page



REMOVE BACKGROUND: Removes picture from background to return to clear whiteboard



SETTINGS:



SELECT: Draw circle around writing to make it an object to re-size and/or move



KEYBOARD: Brings up keyboard to enter information (website, file name, etc.)



ROTATE: Rotate object



EXIT: Tap to exit LightPen software



PRINT: Print to any printer available on computer



UNDO: Undo previous step(s)



REDO: Redo previous step(s)



SPOTLIGHT: Blacks out screen except for “spotlight” that can be moved to reveal parts of the screen



SHADE: Places a black “shade” on the screen that can be moved around to reveal parts of the screen



MOVE TOOLBAR: Move toolbar to bottom of screen



MOVE TOOLBAR: Move toolbar to opposite side of screen